

**fi-4120C, fi-4120C2, fi-4220C & fi-4220C2**

**PRINTED CIRCUIT ASSEMBLIES**

PART NUMBER	DESCRIPTION	fi-4120C	fi-4120C2	fi-4220C	fi-4220C2
PA03289-K001	CONTROL PCA	X	-	-	-
PA03289-K002	CONTROL PCA	-	-	X	-
PA03289-K003	PANEL PCA	X	-	X	-
PA03289-K005	JOINT PCA	-	-	X	X
PA03289-K501	CONTROL PCA	-	X	-	-
PA03289-K502	CONTROL PCA	-	-	-	X
PA03289-K503	PANEL PCA	-	X	-	X
PA55001-0011	LAMP INVERTER	X	X	X	X

**ASSEMBLIES**

PART NUMBER	DESCRIPTION	fi-4120C	fi-4120C2	fi-4220C	fi-4220C2
PA03010-6061	AC ADAPTER	X	-	X	-
PA03289-C902	DOCUMENT COVER ASSEMBLY	-	-	X	X
PA03289-D502	FB COVER	-	-	X	X
PA03289-D901	BASE UNIT	X	-	X	-
PA03289-D902	UPPER UNIT	X	-	-	-
PA03289-D903	UPPER UNIT	-	-	X	-
PA03289-D951	BASE UNIT	-	X	-	X
PA03289-D952	UPPER UNIT	-	X	-	-
PA03289-D953	UPPER UNIT	-	-	-	X
PA03289-E901	GUIDE A ASSEMBLY	X	-	X	-
PA03289-E902	GUIDE P ASSEMBLY	X	-	X	-
PA03289-E903	OPTICAL UNIT (FRONT & BACK)	X	-	X	-
PA03289-E904	STACKER UNIT	X	X	-	-
PA03289-E905	CHUTE UNIT	X	X	X	X
PA03289-E906	DUST COVER ASSEMBLY	X	-	X	-
PA03289-E907	UPPER ASSEMBLY	X	-	X	-
PA03289-E913	OPTICAL UNIT	-	X	-	X
PA03289-E951	GUIDE A ASSY	-	X	-	X
PA03289-E952	GUIDE P ASSY	-	X	-	X
PA03289-E953	DUST COVER ASSY	-	X	-	X
PA03289-E954	UPPER ASSY	-	X	-	X
PA03289-F304	BW ASSY	-	X	-	X
PA03289-F502	FB BASE COVER	-	-	-	X
PA03289-F901	SENSOR ASSEMBLY B	X	-	X	-
PA03289-F902	FB MOTOR UNIT	-	-	X	X
PA03289-F930	BW MOTOR	-	X	-	X
PA03289-K006	LAMP (FRONT & BACK)	X	X	X	X
PA03289-Y008	UPPER COVER	X	-	-	-
PA03289-Y321	UPPER COVER	-	X	-	-
PA03289-Y322	UPPER COVER	-	-	-	X
PA03289-Y350	FIXED FRAME EH	-	X	-	-
PA03289-Y531	UPPER COVER	-	-	X	-
PA03334-F907	SENSOR EM	-	X	-	X
PA03420-K808	AC ADAPTER	-	X	-	X
PA03951-0293	ADF MOTOR UNIT	X	X	X	X
PA03951-0305	SENSOR PTR	X	X	X	X
PA03951-0306	SENSOR LED	X	X	X	X
PA49001-0377	COVER OPEN SENSOR	X	X	X	X
PA61001-0135	SCSI CABLE	X	X	X	X
PA61001-0142	USB CABLE	X	X	X	X
PA63088-2001	AC CORDSET	X	X	X	X
PA98901-0055	SENSOR (FB)	-	-	X	X

## PIECE PARTS

PART NUMBER	DESCRIPTION	fi-4120C	fi-4120C2	fi-4220C	fi-4220C2
CA98001-8785	SCREW	X	x	X	x
PA03277-Y123	TEST SHEET (W)	X	-	X	-
PA03277-Y237	BUSHING	X	X	X	X
PA03289-F904	CR FRAME	-	-	X	X
PA03289-Y003	LED PIPE	X	X	X	X
PA03289-Y004	ADF BUTTON	X	X	X	X
PA03289-Y005	PANEL COVER	X	X	X	X
PA03289-Y006	FILTER	X	X	X	X
PA03289-Y019	STACKER2	X	X	-	-
PA03289-Y020	OPEN-BUTTON	-	X	-	X
PA03289-Y023	PAD PLATE	X	-	X	-
PA03289-Y029	GEAR	X	X	X	X
PA03289-Y030	PULLEY	X	X	X	X
PA03289-Y044	ROLLER COVER1	X	-	X	-
PA03289-Y045	ROLLER COVER2	X	-	X	-
PA03289-Y051	PICK SHAFT	X	X	X	X
PA03289-Y052	PAD SPRING	X	X	X	X
PA03289-Y058	PICK GEAR	X	-	X	-
PA03289-Y061	COLLAR	X	X	X	X
PA03289-Y064	BUTTON-COVER	-	X	-	X
PA03289-Y065	SIDE COVER	X	-	X	-
PA03289-Y090	HK RING L2	X	X	X	X
PA03289-Y095	PICK GEAR	-	X	-	X
PA03289-Y117	WHITE SHEET (WHITE REFERENCE)	X	-	X	-
PA03289-Y141	PAD PLATE	-	X	-	X
PA03289-Y307	FEED COVER EH	-	X	-	X
PA03289-Y308	EXIT COVER EH	-	X	-	X
PA03289-Y309	CABLE COVER	-	X	-	X
PA03289-Y505	EXTENSION (DOC COVER)	-	-	X	X
PA03289-Y506	JOINT (DOC COVER HINGE)	-	-	X	X
PA03289-Y507	SHIPPING LOCK	-	-	X	X
PA03289-Y515	CR COVER	-	-	X	X
PA03289-Y518	CR SHAFT	-	-	X	X
PA03951-0224	CR BELT	-	-	X	X
PA03951-0310	ADF BELT	X	X	X	X
PA70002-0922	CCD CABLE F	X	X	X	X
PA70002-0923	BS CABLE (BACKSIDE CCD)	X	X	X	X
PA70002-0924	SE CABLE F	X	-	X	-
PA70002-0926	FG CABLE	X	X	X	X
PA70002-0928	CR CABLE	-	-	X	X
PA70002-0929	INVERTER CABLE (FB)	-	-	X	X
PA70002-0930	CCD CABLE FB	-	-	X	X
PA70002-0931	SE CABLE FB	-	-	X	X
PA70002-0934	SE CABLE F	-	X	-	X
PA70002-0935	SE CABLE B	-	X	-	X
PA82900-0162	PT SCREW	X	X	X	X
RU6ER3-S	E-RING	-	X	-	X
RU6ER4-S	E-RING	X	X	X	X
RU6GAU11-BK	FOOT	X	X	X	X
RU6SNA3-08121	MACHINE SCREW M3x6	X	X	X	X
RU6SW2N2R6-08113	SCREW	-	X	-	X
RU6SW2N3-08111	MACHINE SCREW WWASHER M3x8	X	X	X	X
U30L-0010-0030#M3X8	TP SCREW M3x8	-	-	X	X

fi-4120C, fi-4120C2, fi-4220C & fi-4220C2

CONSUMABLES

PART NUMBER	DESCRIPTION	fi-4120C	fi-4120C2	fi-4220C	fi-4220C2
GC01000-507001	SCAN/AID CONSUMABLE & CLEANING KIT	X	X	X	X
PA03289-0001	PICK ROLLER	X	X	X	X
PA03289-0003	PAD ASSEMBLY (WITH GUIDE P)	X	-	X	-
PA03289-0111	PAD ASSEMBLY	X	X	X	X

CLEANING

PART NUMBER	DESCRIPTION	fi-4120C	fi-4120C2	fi-4220C	fi-4220C2
CA99501-0012	CLEANING PAPER, 10 PACK	X	X	X	X
CA99501-0013	F1 CLEANER	X	X	X	X
CG00000-602701	CLEANING PAPER, 50 PACK	X	X	X	X
CG01000-373001	CLEANING KIT	X	X	X	X
CG90000-120001	CLEANING CLOTH, 20 PACK	X	X	X	X
CG90000-120601	CLEANING SWABS, 100 BAG	X	X	X	X

OPTIONS

PART NUMBER	DESCRIPTION	fi-4120C	fi-4120C2	fi-4220C	fi-4220C2
CA00050-0262	IMPRINTER PRINT CARTRIDGE 3 PACK	X	-	X	-
PA03289-D201	IMPRINTER	X	-	X	-
PA43402-C22901	SCANRIGHT SOFTWARE IPC	X	X	X	X

MANUALS

PART NUMBER	DESCRIPTION	fi-4120C	fi-4120C2	fi-4220C	fi-4220C2
P3PC-E007	OPERATOR'S GUIDE	X	-	-	-
P3PC-E017	OPERATOR'S GUIDE	-	-	X	-
P3PC-E647	GETTING STARTED GUIDE	X	-	-	-
P3PC-E667	GETTING STARTED GUIDE	-	-	X	-
P3PC-E907	OPERATOR'S GUIDE	-	X	-	-
P3PC-E917	GETTING STARTED GUIDE	-	X	-	-
P3PC-E927	OPERATOR'S GUIDE	-	-	-	X
P3PC-E937	GETTING STARTED GUIDE	-	-	-	X

PACKAGING

PART NUMBER	DESCRIPTION	fi-4120C	fi-4120C2	fi-4220C	fi-4220C2
PA97300-K481	PACKAGE (OVERALL)	X	-	-	-
PA97300-K533	PACKAGE (OVERALL)	-	-	X	-
PA97300-K814	FULL PACKAGING MATERIALS	-	X	-	-
PA97300-K815	FULL PACKAGING MATERIALS	-	-	-	X
PA97300-Y309	CUSHION L	X	-	-	-
PA97300-Y310	CUSHION R	X	-	-	-
PA97300-Y311	CUSHION L	-	-	X	-
PA97300-Y312	CUSHION R	-	-	X	-
PA97300-Y319	OUTER CASE	X	-	-	-
PA97300-Y320	OUTER CASE	-	-	X	-
PA97301-Y309	CUSHION L	-	X	-	-
PA97301-Y310	CUSHION R	-	X	-	-
PA97301-Y311	CUSHION L	-	-	-	X
PA97301-Y312	CUSHION R	-	-	-	X
PA97301-Y480	OUTER CASE	-	X	-	-
PA97301-Y481	OUTER CASE	-	-	-	X